





Please read the entire instruction manual before you start installation and assembly

Thank You for choosing this Mountright product; We would like to assure you that every effort is made to ensure this product reaches you in perfect condition, we advise you to please note the following before the assembly of product:

TO BE READ BEFORE UNWRAPPING PARTS:

- 1. Please check the manual carefully before installation of the product.
- 2. We recommend that two people are present to install this unit.
- 3. **Please check** all the parts are same as shown on the manual, if there are any parts missing or parts appear defective then please contact us. never use defective parts for safety reasons.
- 4. **Please report** any damaged parts to us directly as these can be replaced quickly, at no cost, in this case you should contact us directly for the fastest response.
- 5. We have designed this product to ensure easy assembly, however if you are still unsure about assembly or you need assistance you may want to contact your local professional for correct/safe assembly.

FOR FAST, FRIENDLY SUPPORT, PLEASE CONTACT US DIRECTLY:



Customer Support:

Telephone: +44 (0) 1244 54 44 66


(10am – 5pm GMT, Monday – Friday, excl. public/bank holidays).


Email: help@mountright.com


(Emails Responded to within 24 hours, 7 days a week, 365 days a year).

- FR: Pour obtenir du soutien et des conseils dans votre langue, consultez notre site Web:
- DE: Für Produkt-Support und Beratung besuchen Sie unsere Website:
- ES: Para obtener ayuda y asesoramiento sobre productos, visite nuestro sitio web:
- IT: Per assistenza e consigli sui prodotti, visita il nostro sito web:

WEB: mountright.com/support

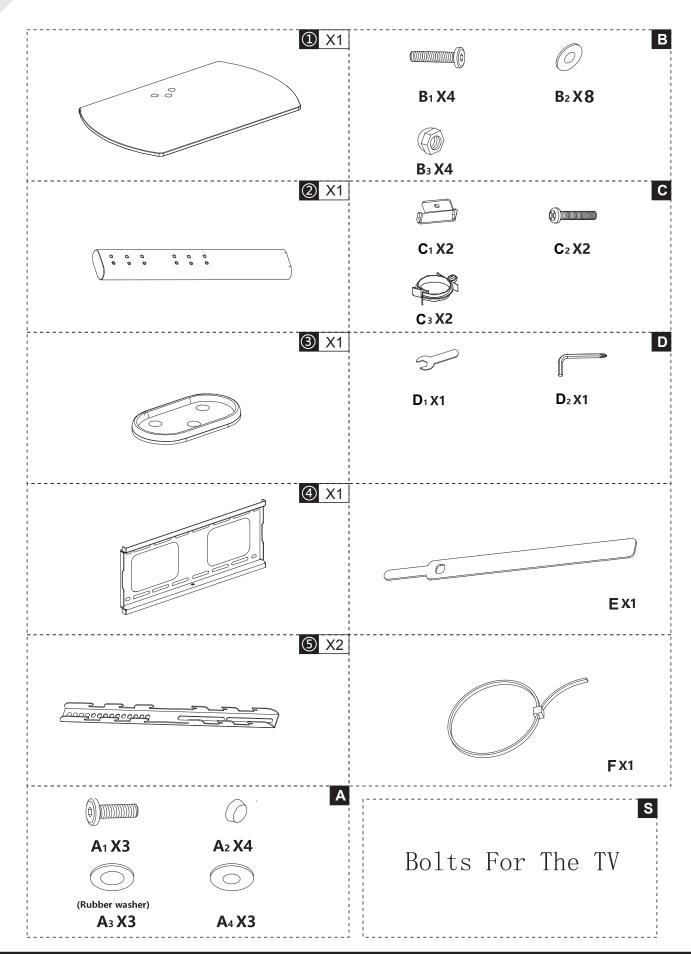


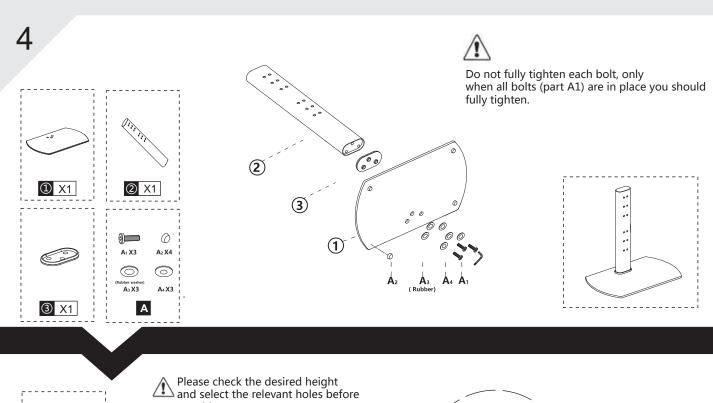


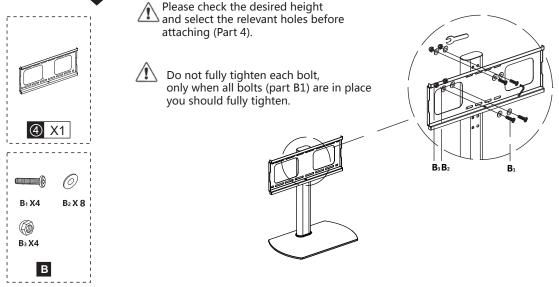




Supplied are the most common bolts for most televisions, always use the bolts which are supplied with the TV where possible, additional bolts may need to be sourced in order to attach your TV.

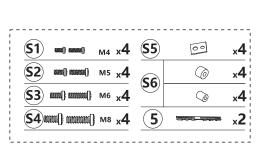

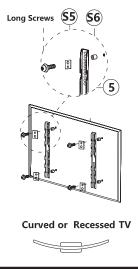

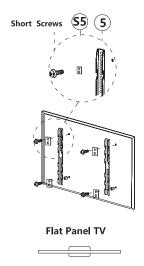



5



The upright (Part 2) allows 3 height options, see below.

The mounting arms (Part 5) allows a further 3 levels of height adjustment, see below.

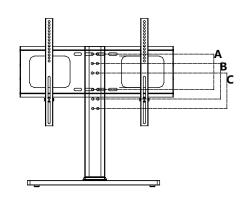

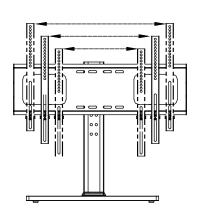



IMPORTANT: Screw Lock the TV before using.

